


# Simple, Accurate and Reliable

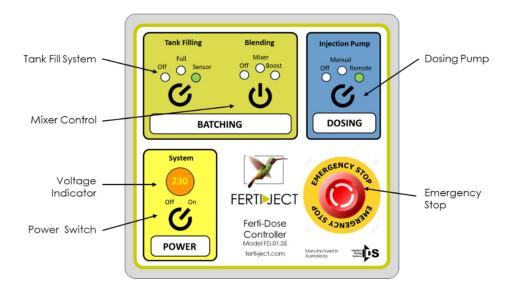


The FertiDose Controller is allows the user to **accuratly batch and dose** fertiliser, chemical and other product when in solution.

It can be used as a stand-alone controller, or integrated with external control systems.

# Using the Ferti-Dose Controller.

| Power          |           | [OFF/ON] energises the controller.   |  |
|----------------|-----------|--|--|
|                |           | Voltage indicator displays the incoming voltage to the controller.   |  |
| Batching       | Tank Fill | [FULL] fills the tank until MAX sensor, activates the Auto Fill Valve, stops at MAX sensor level.  |  |
|                |           | [SENSOR] fills tank until SLIDE sensor, preset by the operator to the required volume, activates the Auto Fill Valve, stops at sensor level. |  |
|                | Blending  | [MIXER] activates the in-tank mixer, stop signal is from LOW sensor.   |  |
|                |           | [BOOST] activates the recirc pump eductors (if fitted), stop signal is from LOW sensor.  |  |
| Dosing         |           | [MANUAL] starts the dosing pump. Stop signal is from LOW sensor.   |  |
|                |           | [REMOTE] a signal from an external system starts the dosing pump. Stop signal is from LOW sensor.  |  |
| Emergency Stop |           | De-energises the controller, all systems will stop.  |  |

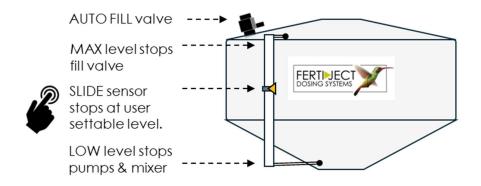

## Using the Auto Fill System.

The Auto Fill system is mounted offset to the tank, to ensure the sensors are not affected by the turbidity caused by the blending systems.

| MAX Level    | [FILL] activates the AUTO FILL valve until the MAX sensor is reached.  |  |  |
|--------------|--|--|--|
| Slide Sensor | [SLIDE] activates the AUTO FILL valve until the SLIDE sensor is reached.   |  |  |
|              | [SLIDE] can be moved by the operator to a level equal to the calibration marks on the tank, the AUTO FILL valve will stop filling at the desired level |  |  |
|              | delivering an exact amount of liquid.  |  |  |
| LOW Level    | Level LOW sensor will stop the mixer, recirc pump (if fitted) and dosing pump when reached.  |  |  |

### Additional modules for Ferti-Dose Panels.

Easilly upgrade your Ferti-Dose panel with add on module that can be ordered with your new system or retrofitted to your existing panel.

| EC Monitor  | Irrigation Control  | Ferti-Link Remote  |
|---|---|--|
| Monitors the EC value of<br>the irrigation stream post<br>the fertiiser injection<br>point, outputs alarm on<br>high value. | Control 6,12 or 24 irrigation valves using conventional wires, 2-wire decoder or wireless decoders. | Set up irrigation and fertigation schedues and receive remote alarms via the Internet of Things. |

#### Talk to us.

Ferti-Ject **service and support** the solutions we sell, with a range of spare parts and other equipment available from selected agents.

Visit ferti-ject.com.au to enquire or download information.



#### **Irrigation Dosing Systems**

Assembled in Western Australia

- **\***+61 0459 478 886
- ⁴ info@ferti-ject.com
- ferti-ject.com

